

Ink Bracket Installation

Version : 350-131120A

Side printing

Ink supply

Minimum 15°

Distance between
bracket bottom to
the regulator top
should be within
16"-69"

Regulator

1"-2"

Regulator top to
printhead
bottom is 1"-2"

Downward Printing

Ink supply

Minimum 15°


Distance between
bracket bottom to
the regulator top
should be within
16"-69"

Regulator

1"-2"

Regulator top to
printhead
bottom is 1"-2"

Draw Ink

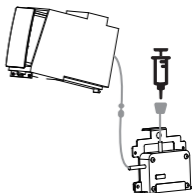

Use extractor to get the air bubble out after connect the ink bag with regulator, then connect to the cartridge; hold for 5-10 min, if still have air inside, repeat air extraction.


Precautions



Don't plug in and out repeatedly, in case air in and cause leakage.



If no printing or insufficient ink supply, pull out the cartridge, hold lower for seconds, increase the pressure, to make the ink out.

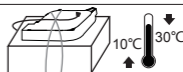

While no in use, disconnect the cartridge, cap it, install in flat way; store temp: 10~30°C